



# CARE TIPS

FOR DEKODUR DISTIL REFLECTIVE LAMINATES

dekodur<sup>®</sup> DISTIL



**CLEAN**  
THE SURFACE WITH



Clean, soft  
lint-free cloth

+



Warm water



**DRY**  
THE SURFACE WITH



Dry lint-free cloth

- Lint-free cloths reduce the chances of scratching the surface.
- A good lint-free cloth is microfibre cloth.



**NEVER USE**



Acid or alkali cleaners




Abrasive cleaners

- These cleaners can attack the surface and edges as well as the backing of the laminate.
- 0000 oil-free cleaners, not solvents, are recommended for removing stubborn marks.

## WHEN USING AN APPROPRIATE CLEANING SOLUTION, REMEMBER TO



**Always** spray the solution onto a soft, lint-free cloth and then wipe the surface. This will prevent the solution from coming into contact with the edges.

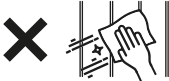

**Never** clean across multiple surfaces at the same time.



If **multiple surfaces** need to be cleaned at the same time, wipe along the joints, i.e. following the direction of the joint lines. This will keep the cleaner from collecting in the area where the laminates join.



## TOP 3 GOOD HABITS



Use soft, lint-free cloth for cleaning and drying.



**Don't** use acid, alkali or abrasive cleaners.



**Never** spray the cleaning solution onto the surface. Do so onto a soft, lint-free cloth first.